

Help Guide 17

Updating the Firmware in my EnviroPad



What is this?


This Help Guide refers to the EL-EnviroPad.

Updating the Firmware in my EnviroPad

- 1 Download and install the latest EnviroPad PC software from download.filesthrutheair.com, and install the software on your PC.




- 2 Turn your EnviroPad On and connect it to a USB port on your PC.

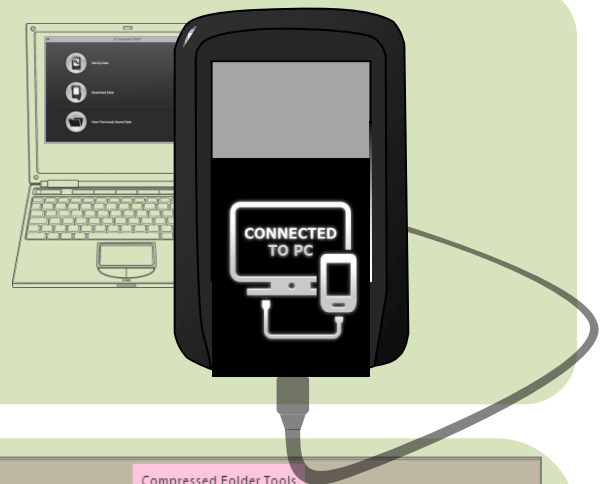

- 3 Download the latest EnviroPad firmware from download.filesthrutheair.com and unzip the file.

EnviroPad firmware is distributed as a zip file containing one or more update files. Simply double click the zip file to open it.

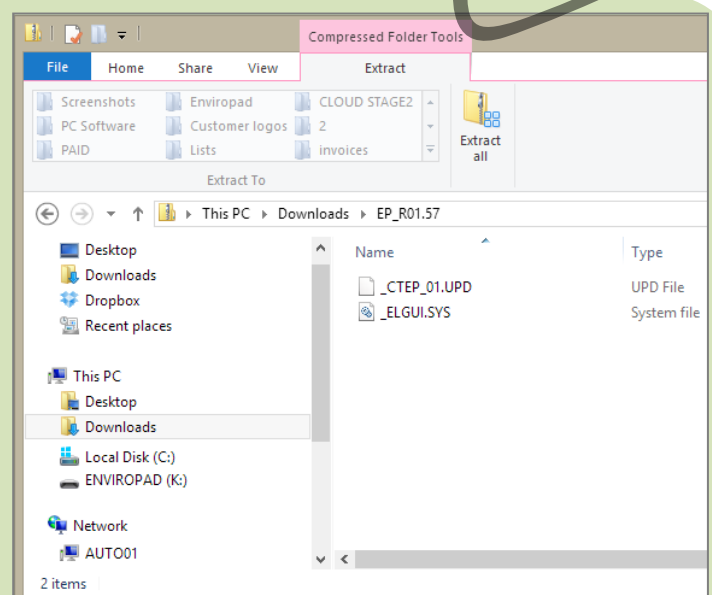


Help Guide 17

Updating the Firmware in my EnviroPad



Windows 8 shown – other Operating Systems may differ.

- 4** Drag and drop, extract or copy all files in the zip to your EnviroPad.

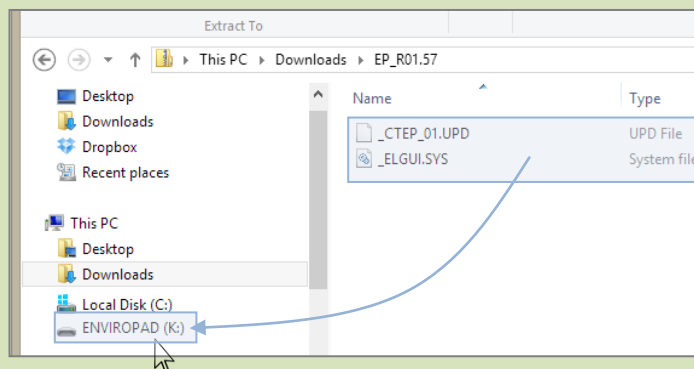

- 5** Disconnect the EnviroPad from the PC then turn the EnviroPad Off by pushing and holding the button.



- 6** Turn the EnviroPad On again, by pushing the button. The unit will restart and automatically load the first update file.



- 7** Repeat steps **5** and **6** for each file until all files are loaded and the unit starts normally.



The firmware is updated.

To check the firmware version on the EnviroPad press ..



```
Status
App Version : R1.57
Boot Version: B2.00
Memory Used : 1%
Serial No   : B00042
Battery     : 85%
TC          : 29.0°C
CI          : 28.5°C
```